


#### STEP 4

4.1 Slide the monitor onto the vesa plate until the quick connect snaps into place

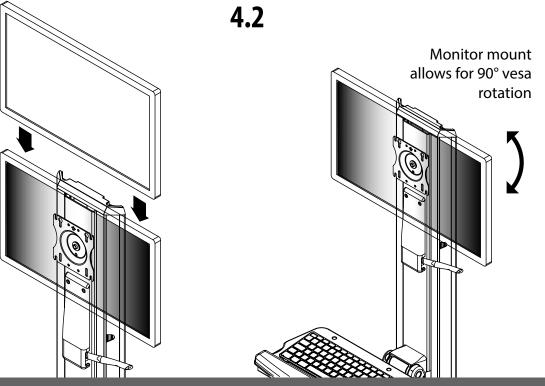

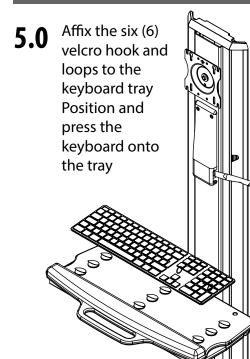

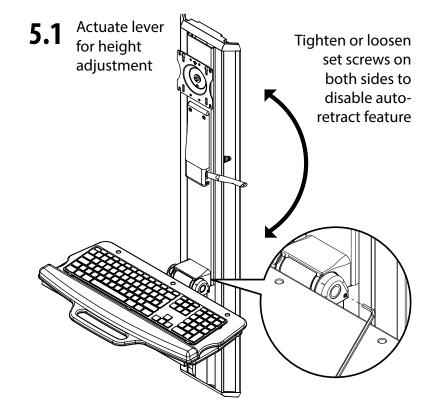

## INSTALLATION INSTRUCTIONS FOR FLUSH WALL MOUNT WORK CENTER




INSTALLATION WARNINGS: Read the entire instruction sheet before you begin installation or assembly. Installer must verify that the wall will safely support the combined weight of all the attached equipment and hardware. Improper installation of this product can cause extensive property damage or serious personal injury, either during or after the installation. It is the responsibility of the installer to ensure that all applications including wood, concrete, block, brick, steel, etc. are secured properly to code. California installations could require specific anchorage, and additional mounting screws. Check with local authorities for codes in your area. Other seismic states have similar regulations.


**Warning**: Max load 20 lbs of applied equipment including but not limited to: LCD, keyboard, mouse, cabling and peripherals.

DISCLAIMER: The Manufacturer and/or Distributor will bear no responsibility for any damages of any kind arising from any improper installation of this product. Because wall construction varies widely and the ultimate method of mounting is out of the Manufacturers or Distributors control, it is imperative that the installer consult with local engineering, architectural, or construction personal to ensure the wall is constructed properly and to code to handle the applied load.

### **TOOLS REQUIRED**

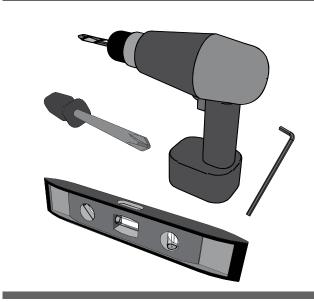



## **PARTS IN A BOX**

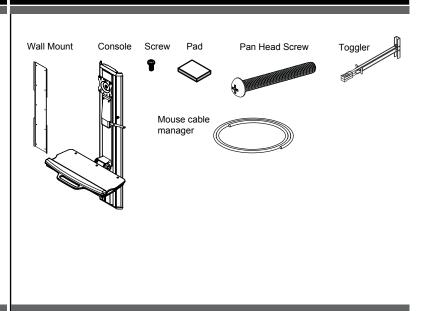


FXTM181 Rev. C



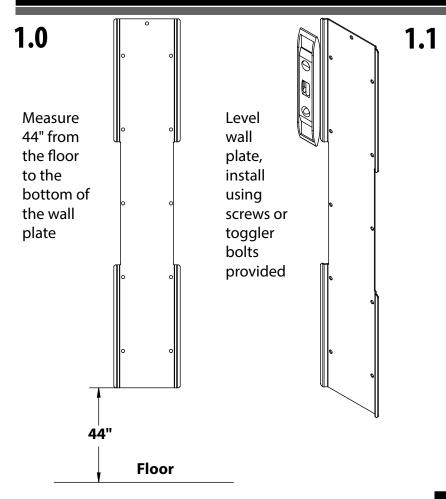

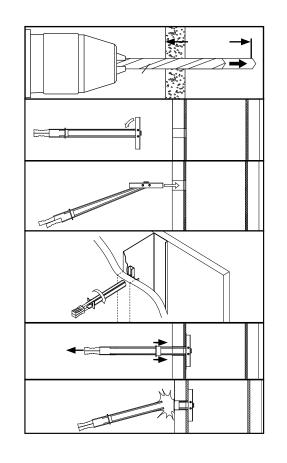

# 1.2 Align the Fusion mount over the track, then slide it down the wall plate until the Fusion stops sliding

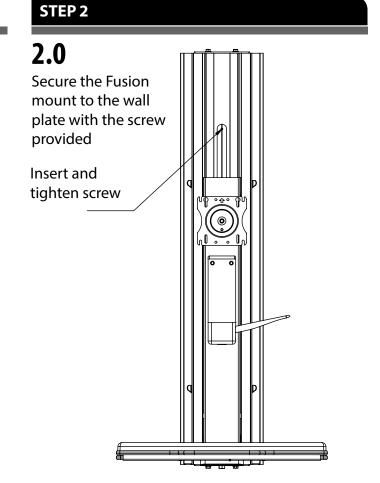

## STEP 3

