INSTALLATION INSTRUCTION
FOR DUAL SPANNER

STEP 1. ....Track Installation
OPTION B. ....CPU Mount

INSTALLATION WARNING: Read the entire instruction sheet before you begin installation or assembly. Installer must verify that the entire wall will safely support the combined weight of all the attached equipment and hardware. Improper installation of this product can cause extensive property damage or serious personal injury, either during or after the installation.

DISCLAIMER: The Manufacturer and/or Distributor will bear no responsibility for any damages of any kind arising from any improper installation of this product. Because wall construction varies widely and the ultimate method of mounting is out of the Manufacturers or Distributors control, it is imperative that the installer consult with local engineering, architectural, or construction personnel to ensure the wall is constructed properly and to code to handle the applied load. Guidelines for installing to drywall, cinder block, concrete, steel and wood studs are provided.

SAFETY WARNING: California installation could require specific anchorage, and additional screws and supports. Check with local authorities for codes in your area. Other seismic states have similar regulations.

INSTALLATION WARNINGS: Read the entire instruction sheet before you begin installation or assembly. Installer must verify that the wall will safely support the combined weight of all the attached equipment and hardware. Improper installation of this product can cause extensive property damage or serious personal injury, either during or after the installation.

DISCLAIMER: The Manufacturer and/or Distributor will bear no responsibility for any damages of any kind arising from any improper installation of this product. Because wall construction varies widely and the ultimate method of mounting is out of the Manufacturers or Distributors control, it is imperative that the installer consult with local engineering, architectural, or construction personal to ensure the wall mount is constructed properly and to code to handle the applied load.
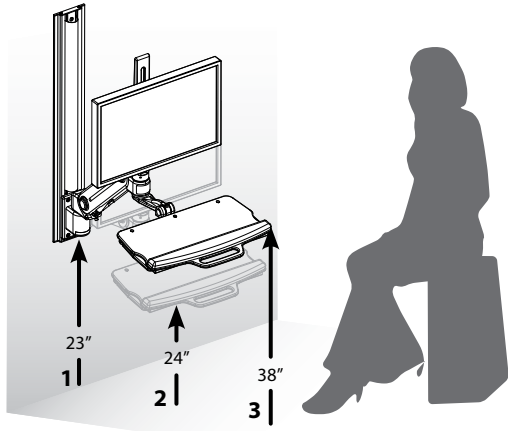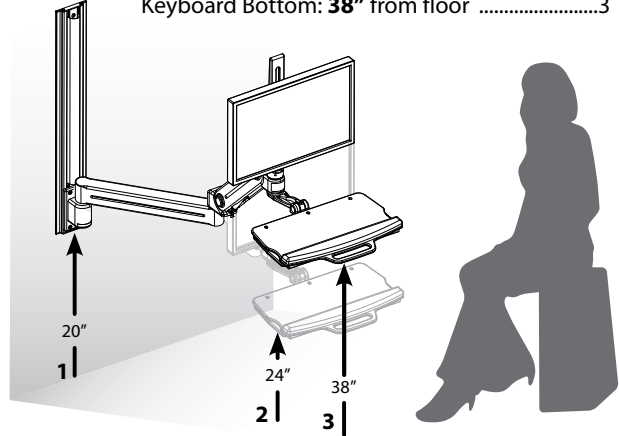
PARTS IN BOX
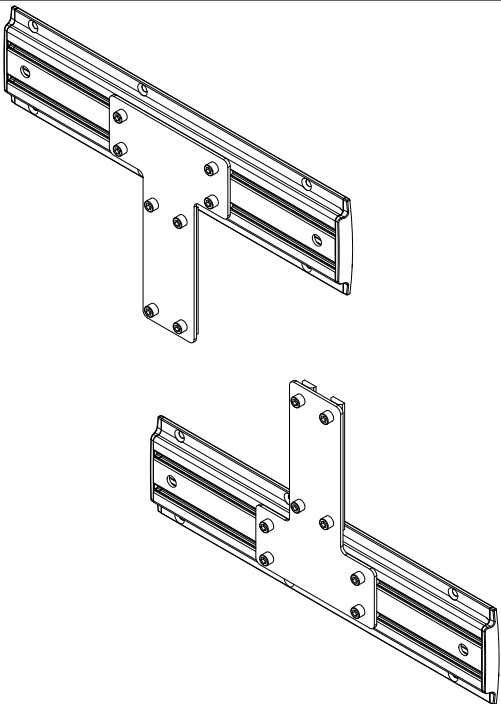
TOOLS REQUIRED
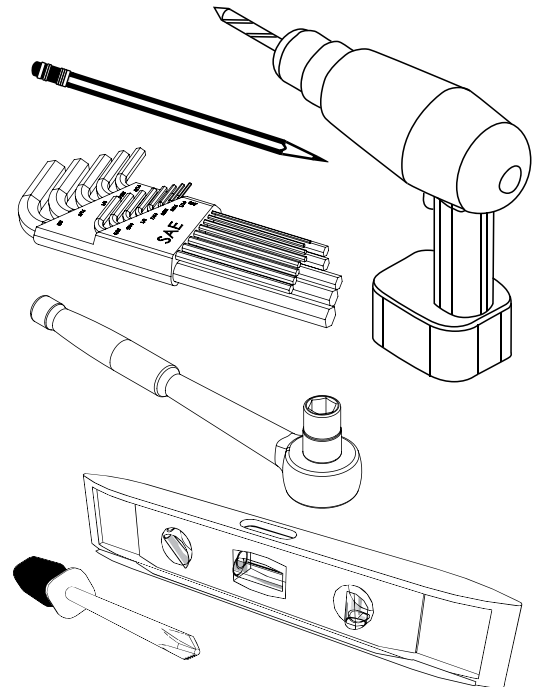
11113 Rev. B

COMPLETE ARM   A B C

COMPLETE ARM - WITH EXTENSIONS   E F G

A SITTING MOUNTING HEIGHT:
Track: **12.55"** from floor 1
Keyboard Bottom: **24"** from floor 2
Keyboard Bottom: **38"** from floor 3

23"
1
24"
2
38"
3

E SITTING MOUNTING HEIGHT:
Track: **9.55"** from floor 1
Keyboard Bottom: **24"** from floor 2
Keyboard Bottom: **38"** from floor 3

20"
1
24"
2
38"
3

B SIT/STAND MOUNTING HEIGHT:
Track: **12.55"** from floor 1
Keyboard Bottom: **27"** from floor 2
Keyboard Bottom: **41"** from floor 3

26"
1
27"
2
41"
3
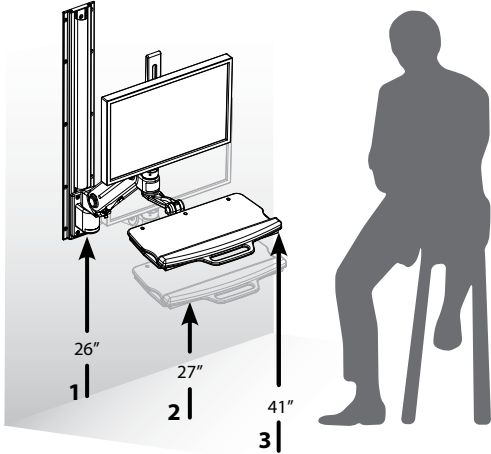
F SIT/STAND MOUNTING HEIGHT:
Track: **9.55"** from floor 1
Keyboard Bottom: **24"** from floor 2
Keyboard Bottom: **38"** from floor 3

23"
1
27"
2
41"
3
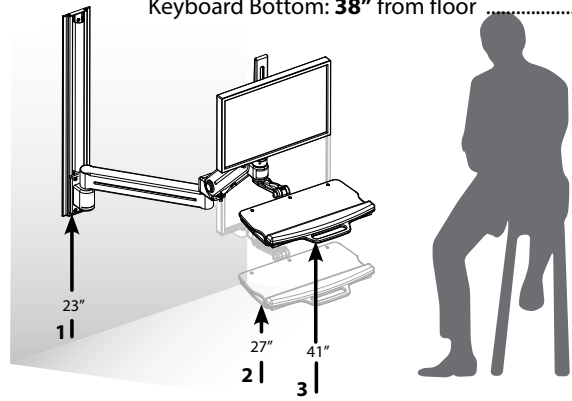
C STANDING MOUNTING HEIGHT:
Track: **21.55"** from floor 1
Keyboard Bottom: **27"** from floor 2
Keyboard Bottom: **41"** from floor 3

32"
1
33"
2
47"
3
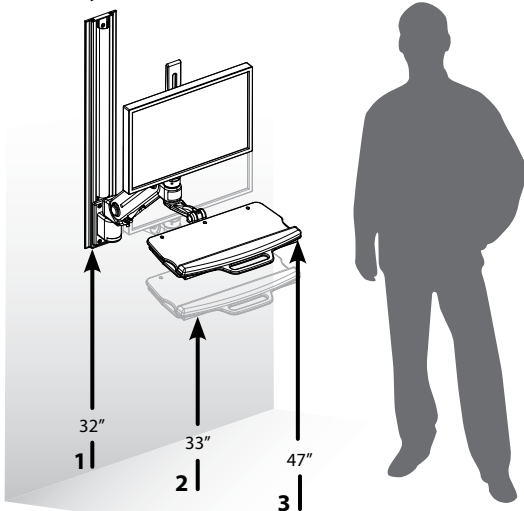
G STANDING MOUNTING HEIGHT:
Track: **18.55"** from floor 1
Keyboard Bottom: **24"** from floor 2
Keyboard Bottom: **38"** from floor 3
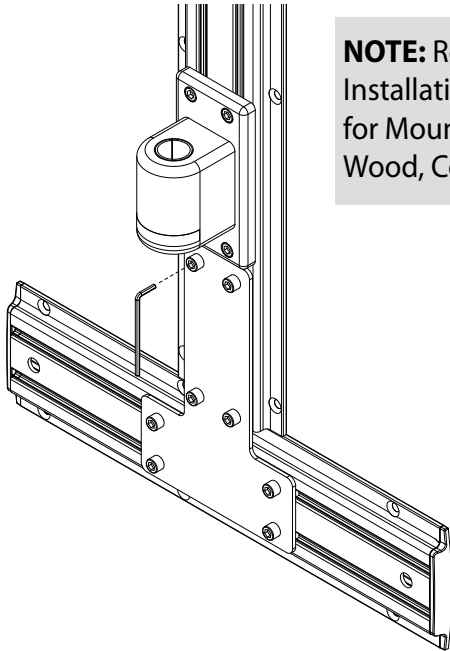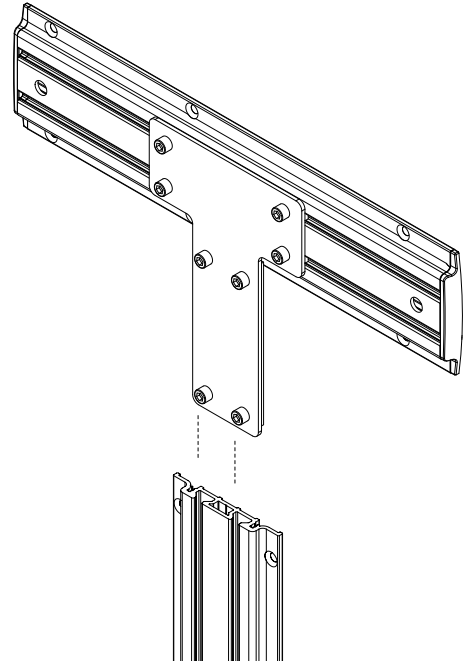
29"
1
33"
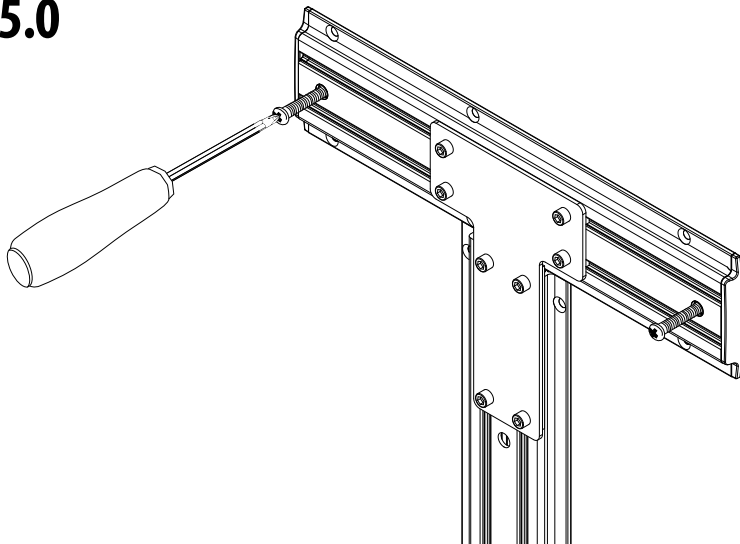**2**
47"
3
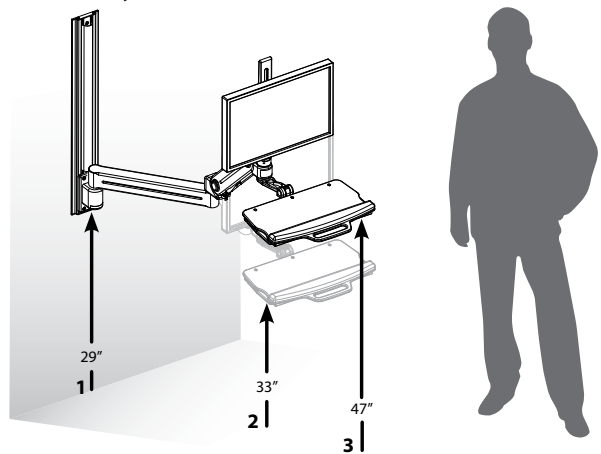
1.0
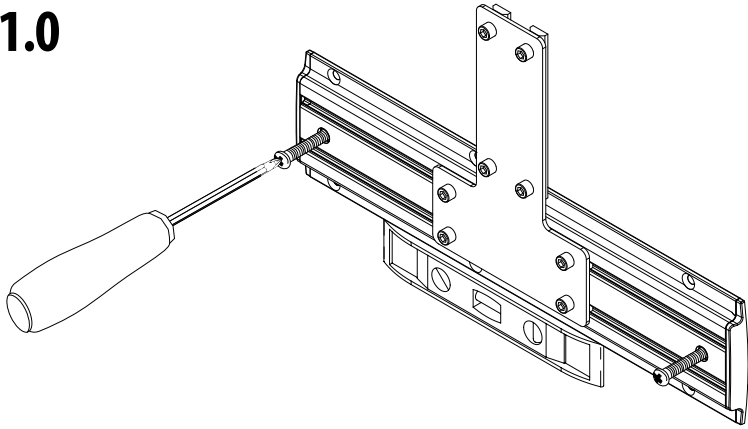
2.0
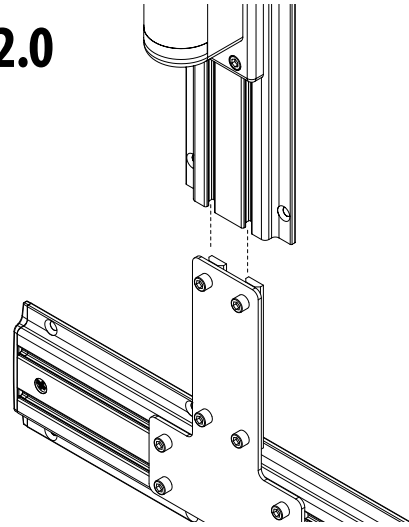
3.0

NOTE: Refer to Track Installation Instructions for Mounting to Steel, Wood, Concrete Drywall.
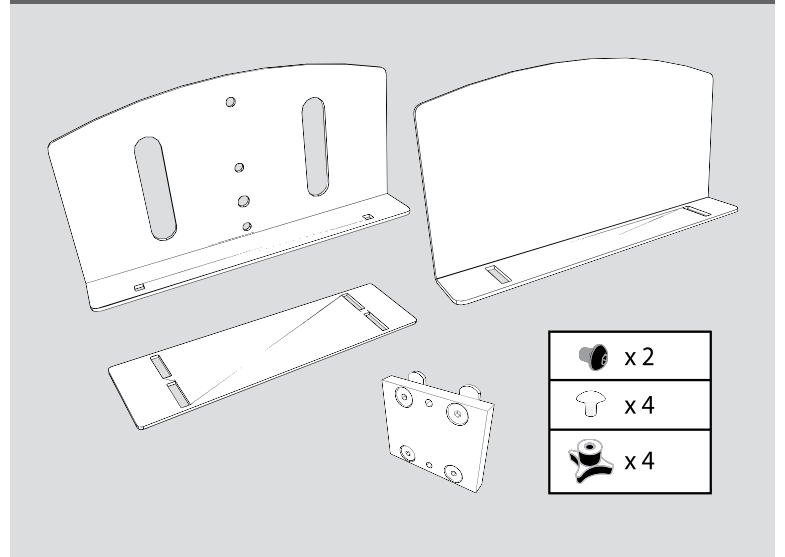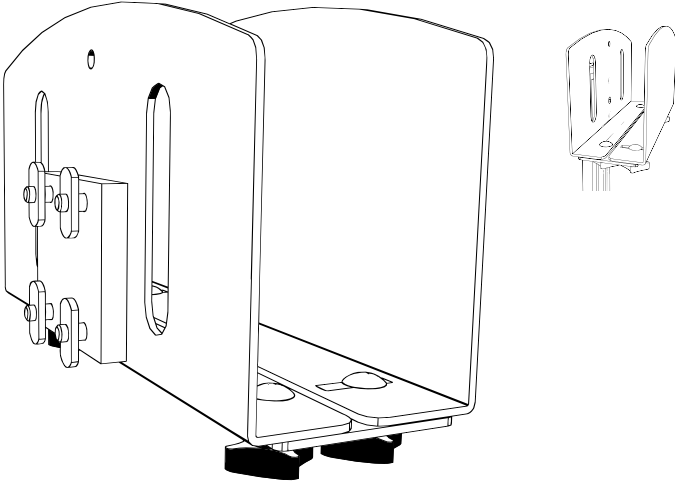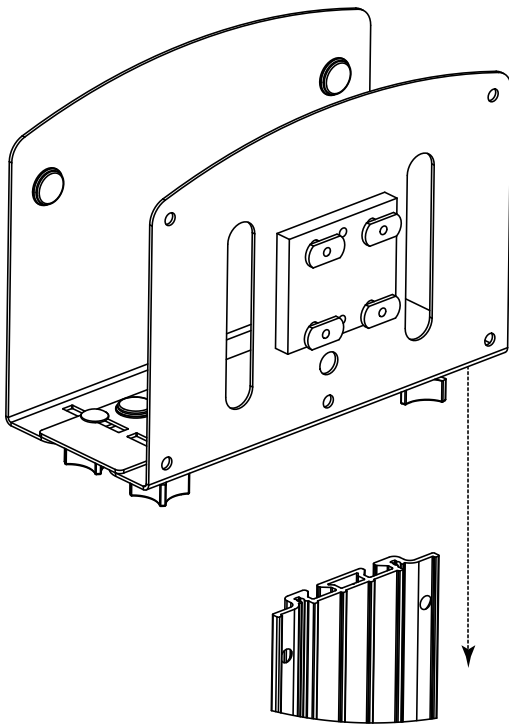
4.0

5.0

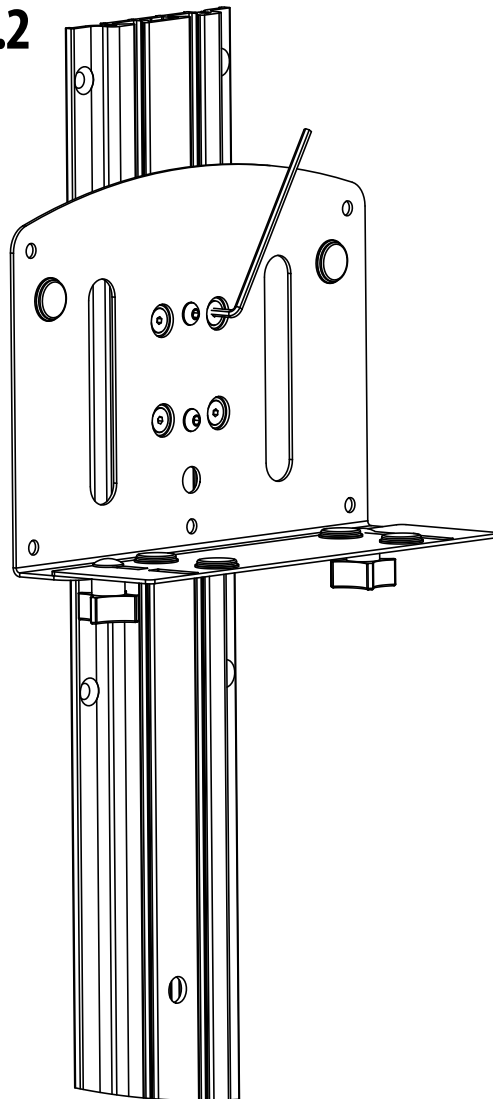**6.0**
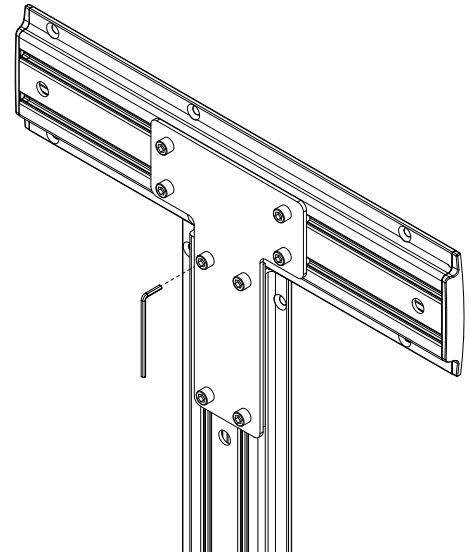
INSTALLATION INSTRUCTION
FOR DUAL SPANNER

OPTION B: CPU MOUNT

PARTS IN A BOX

🔩	x 2
⬦	x 4
🔩	x 4

B.1

B.2

B.3

B.4

11113 Rev. B