

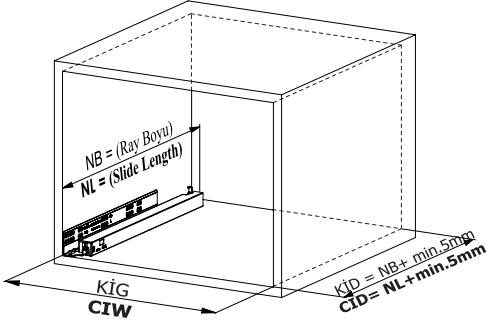


Cabinet Dimensions




Cabinet Internal Width : CIW
Cabinet Internal Depth : CID
Drawer Depth : DD
Drawer Internal Width : DIW
Nominal Length : NL


Recommended Screw and Templates



Smart Lock Template







Smart Drilling Jig








Smart Drilling Jig with Ruler


Screw Location for the Slides *Screw the slide from marked holes.*

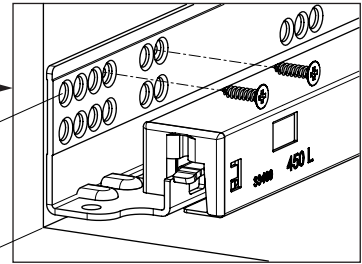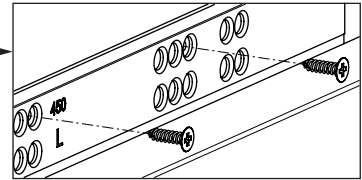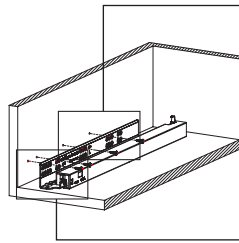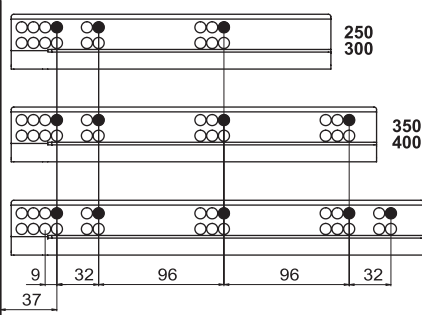



Drawer Dimensions

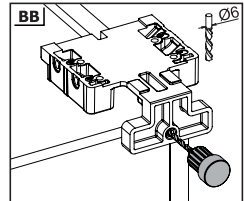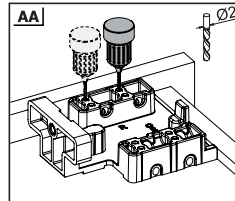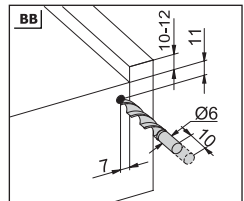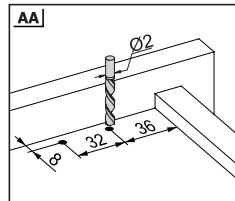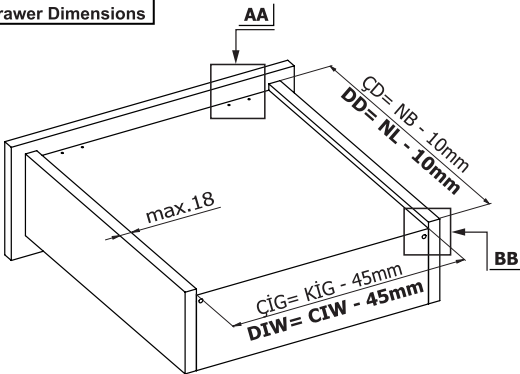


1

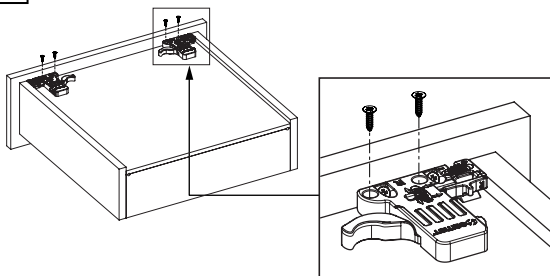


Note: Use angled holes to mount smart lock when wooden floor width is selected less than 12 mm.

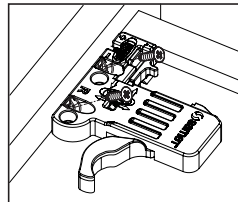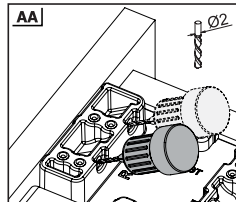


2

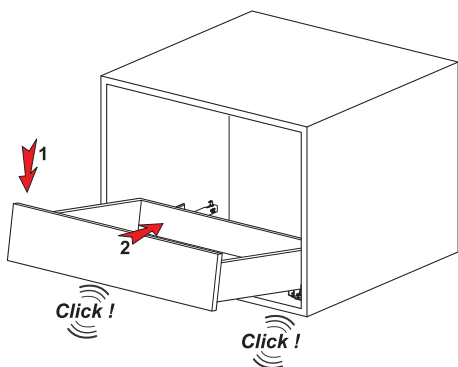

3

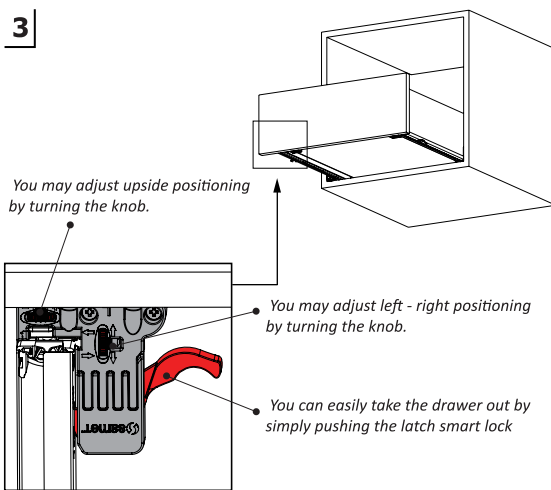



Smart Drilling Jig




Kod / Code

12799902

12799904

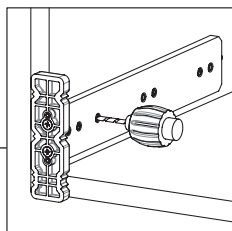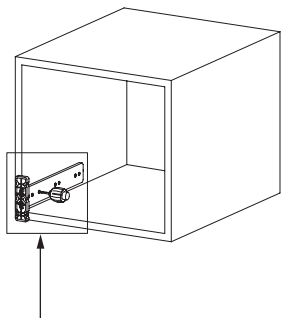

Smart Drilling Jig with Ruler



Kod / Code

12799901

12799905

